

Re-inking your self-inking stamp is as easy as

Press down slightly -



and remove the ink pad




Re-ink with regular stamp pad ink as shown.

Replace the pad the same direction it was removed




Use Standard Rubber Stamp Pad Ink to Re-Ink your Self-Inking Stamp Pad


Pour ample amounts of ink in the center of the ink pad.

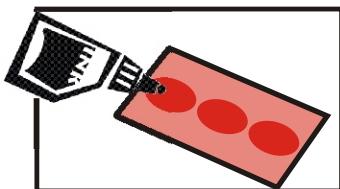

Ink flows out as the pad absorbs the ink.

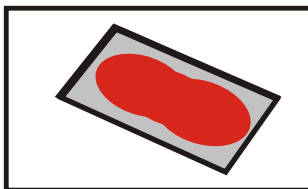

After 5-10 minutes, the ink will have been completely absorbed in the pad.

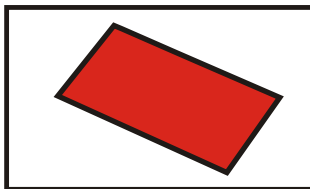

Recycle! The ink pad can be changed anytime, and the message die replaced at half-cost!