

Re-inking your self-inking stamp is as easy as

Press down slightly -



Re-ink with regular stamp pad ink as shown.

and remove the ink pad



Replace the pad the same direction it was removed




Use Standard Rubber Stamp Pad Ink to Re-Ink your Self-Inking Stamp Pad

Pour an ample amount of ink in the center of the ink pad.

Ink flows out as the pad absorbs the ink.

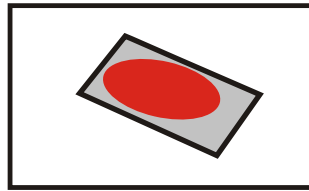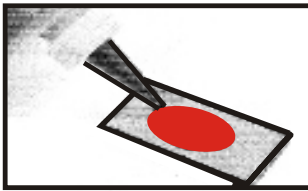

After 5-10 minutes, the ink will have been completely absorbed in the pad. Please re-insert the pad in the same direction it was removed.

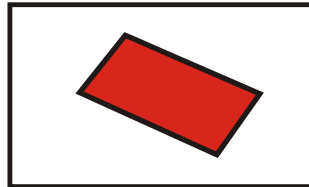

Recycle! The ink pad can be changed anytime, and the message die replaced at half-cost!